

Guide For SonicView 8000 HD



- 1) Install your dish(s) outside. For DN point the dish to either 110W or 119W or both if you have a bracket. For Bev point your dish to either 82W or 91W or both if you have a bracket
- 2) Connect a cable to each round type LNB
- 3) Connect the other end of the cables to a switch (only required if you have more than one LNB) Note what LNB & Satellite you connect to which switch number.
- 4) From the switch connect a cable to your receivers Satellite In.
- 5) Use a HDMI cable to connect your receiver to your TV
- 6) Turn on your receiver
- 7) Press OK to select English
- 8) Press the Menu Key
- 9) Select Install
- 10) Select Dish Settings press OK
- 11) You should now be at Dish Settings
- 12) Press OK
- 13) For 110W, scroll down until you reach EchoStar 8,X 110W
- 14) Press the Blue button to Set Favourite and press OK
- 15) Check you Signal and Quality
- 16) If you used a switch use your down arrow key until you get do DiSEqC
- 17) Use your side arrow until you reach the Port Number of 110W
- 18) Press the RED button for Scan SAT DO NOT BLIND SCAN!!! VERY IMPORTANT STEP.
- 19) Your settings should be: Satellite = Current Satellite....Mode = Fast...Polarization = All
- 20) Press OK
- 21) After the scan is complete it OK to save your changes.
- 22) Repeat Steps 8-21 for 119W EchoStar7 119.0W and select the DiSEqC for 119W
- 23) Repeat Steps 8-21 for 82W NimiQ2 82W and select the DiSEqC for 82W
- 24) Repeat Steps 8-21 for 91W NimiQ1.3 91.0W and select the DiSEqC for 91W
- 25) On your computer insert a memory stick less than 1GB
- 26) Format the memory stick for Fat32
- 27) Download the latest ROM file onto your computer
- 28) Unzip the downloaded file
- 29) Copy the unzipped file to your memory stick
- 30) Insert your memory stick into the front of your receiver
- 31) Press the Menu Key
- 32) Use your arrow keys to you reach USB
- 33) Press OK or select File List then press OK
- 34) Select the current ROM File

- 35) Select S/W Update and Press OK
- 36) DO NOT REMOVE THE MEMORY STICK UNTIL THE SYSTEM RE-BOOTS
- 37) After re-boot remove memory stick, press EXIT and watch TV

If you complete the above and you are not getting BEV

=====

- 1) On your computer download the latest Softkey patch
- 2) Unzip the file
- 3) Copy the Unzipped file to your memory card
- 4) Insert your memory card into your receiver
- 5) Press the Menu Key
- 6) Use your arrow keys to you reach USB
- 7) Press OK or select File List then Press OK
- 8) Scroll down to the Key file and press OK
- 9) Select Key Update and Press OK
- 10) DO NOT REMOVE THE MEMORY STICK UNTIL THE SYSTEM RE-BOOTS
- 11) After re-boot remove memory stick, press EXIT and watch TV

Installing a External Hard Drive

=====

- 1) On your computer format the drive for FAT32 (I'm using a 340GB external drive)
- 2) Install the Hard Disk at your receiver with the USB cable plugged in the front and wait for the HD to boot
- 3) Press the Menu Key
- 4) Use our arrow key and select USB
- 5) Select Scan Disk and Press OK
- 6) Select Yes to Scan USB Drive (I believe this prepares the HD to work with the SonicView)
- 7) Press OK to select Yes when the scan is complete

To Record and Playback from Hard Drive

=====

- 1) Select the channel you wish to record
- 2) Press the Red record button on your remote - you should see a record symbol on your screen
- 3) When you want to stop recording press the Stop button on your remote
- 4) Press OK to select Yes to stop the recording
- 5) To review your recordings, press the Menu Key
- 6) Use your arrow key to select USB
- 7) Select File List and press OK
- 8) Press OK to select SVHD_Video

- 9) Use your up and down arrow keys to select the file you wish to watch and press OK
- 10) Press OK for Playback
- 11) Use your Pause or Stop keys to watch movie

Scrambled Channel on BEV

=====

Check your codes (enter menu then press 7890 and you will see the code menu pop in), check for providers 0905 and 0906 for Bev.

If they are not there, then the key file was not loaded properly. (Thanks bluroy812 for this post)

To Install the 8PSK Module

=====

- 1) Make sure all cables are disconnected before continuing - Failure to do so can destroy your receiver
- 2) Make a Jumper cable out of RG6 cable about 5 inches long and attach ends
- 3) Had to delete this because of live link to another site - Bum4Lyfe
- 4) Reassemble the receiver and attaching all cables
- 5) Install the jumper cable from the UHF Remote Antenna to the IF Out
- 6) Power up the receiver
- 7) Press the Menu Key
- 8) Select the Install Menu
- 9) Use your Up and Down arrow key and select External Module
- 10) The External Module should be "Detected"
- 11) Set Normal QPSK to "Built-in Tuner"
- 12) Press Exit

Notes:

=====

- a) Only use RG6 cables (RG59 cannot carry the high frequency required for satellites)
 - b) 4GB sticks do not work and will give you a short and long flash when inserted into the receiver
-